



Model MB
FIG. 51—TRANSFER CASE

Item No.	Gov't Group	Part No.	Name	Item No.	Gov't Group	Part No.	Name
1	0806	A-963	Shift Fork to Rod Set Screw	36	0805	A-1028	Companion Flange Washer
2	0806	A-960	Front Wheel Drive Shift Fork	37	0801	A-1508	Rear Cover
3	0805	A-992	Output Shaft Clutch Gear	38	0801	A-1509	Rear Cover Gasket
4	0805	52883	Output Shaft Bearing Cup	39	0801	A-1503	Transfer Case
5	0805	51575	Output Shaft Bearing Cone and Rollers	40	0807	A-1511	Speedometer Drive Gear
6	0801	A-957	Output Shaft Bearing Cap Gasket (Front)	41	0801	A-982	Output Shaft Bearing Shim
7	0806	A-965	Shift Rod Interlock	42	0805	A-958	Output Shaft Oil Seal
8	0806	A-962	Front Wheel Drive Shift Rod	43	0801	A-1507	Output Shaft Bearing Cap—Rear
9	0806	A-1504	Under Drive Shift Rod	44	0801	A-985	Speedometer Drive Pinion Bushing
10	0805	A-1007	Output Clutch Shaft Bearing	45	0807	A-1512	Speedometer Driven Gear
11	0805	A-987	Output Clutch Shaft Pilot Bushing	46	0807	636396	Speedometer Driven Gear Sleeve
12	0805	A-975	Output Clutch Shaft	47	0801	A-1104	Transfer Case Drain Plug
13	0805	A-976	Output Clutch Shaft Bearing Snap Ring	48	0806	A-963	Shifting Fork to Rod Set Screw
14	0801	A-956	Output Shaft Bearing Cap—Front	49	0806	A-959	Under Drive Shift Fork
15	0801	A-934	Transfer Case Breather Assembly	50	0804	A-1001	Intermediate Shaft Lock Plate
16	0806	5599	Shift Rod Poppet Ball	51	0805	51575	Output Shaft Bearing Cone and Rollers
17	0806	A-966	Shift Rod Poppet Spring	52	0805	52883	Output Shaft Bearing Cup
18	0806	A-967	Shift Rod Poppet Plug	53	0801	5140	Filler Plug
19	0806	A-974	Shift Rod Oil Seal	54	0801	A-954	Transfer Case Cover Gasket—Bottom
20	0806	A-971	Shift Lever Handle	55	0801	A-953	Transfer Case Cover—Bottom
21	0806	A-1505	Under Drive Shift Lever	56	0805	A-988	Output Shaft Sliding Gear
22	0806	A-1506	Front Wheel Drive Shift Lever	57	0802	A-1510	Main Shaft Gear
23	0806	A-970	Shift Lever Spring	58	0704	A-1410	Main Shaft Washer
24	0806	A-973	Shift Lever Pivot Pin Set Screw	59	0704	5397	Main Shaft Nut Cotter Pin
25	0806	A-972	Shift Lever Pivot Pin	60	0704	A-520	Main Shaft Nut
26	0805	A-1106	Universal Joint End Yoke—Front	61	0804	A-924	Intermediate Gear Bearing
27	0805	A-1028	Companion Flange Nut Washer	62	0804	A-998	Intermediate Shaft
28	0805	5108	Companion Flange Nut Cotter Pin	63	0804	A-1000	Intermediate Gear Thrust Washer
29	0805	A-980	Companion Flange Nut	64	0804	A-999	Intermediate Gear
30	0805	A-958	Output Shaft Oil Seal	65	0804	A-1000	Intermediate Gear Thrust Washer
31	0805	5108	Companion Flange Cotter Pin	66	0804	A-924	Intermediate Gear Bearing
32	0805	A-980	Companion Flange Nut	67	0805	A-1764	Output Shaft
33	0805	A-1105	Companion Flange—Rear	68	0805	A-989	Output Shaft Gear
34	0805	A-1111	Dust Shield	69	0805	A-990	Output Shaft Gear Thrust Washer
35	0809	A-1002	Brake Drum	70	0805	A-991	Output Shaft Gear Snap Ring